






Promessa™ Series Hooks

Revised: 8/21/17

Installation Procedures (Gypsum Wallboard/Drywall Surfaces) For The Following Models:



STEP 1 Insert Blocking

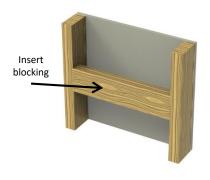


- Insert no less than 2"x 4" wood blocking or locate in vertical stud.
- Warning: FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING

(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)

STEP 2 Locate Wood Blocking




STEP 3 Pre-drill a 3/8" hole

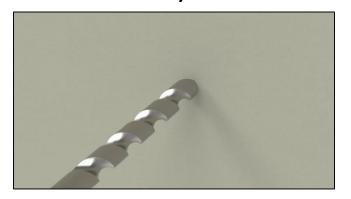

• Pre-drill a 3/8" hole in gypsum wall board (drywall) to accommodate spacer in step 4. Place some tape on the drill to mark drill depth. (Example: If wallboard material is 1/2" thickness, only drill that depth. Do not drill into wood blocking or stud where accessory is being attached)

STEP 4 Insert Spacer

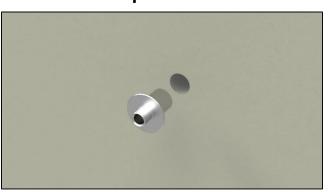

Technical Fact:

Spacer prevents gypsum wallboard (drywall) from collapsing at drilled hole. Additionally, protects from overtightening screw which can draw the accessory into the gypsum wall board (drywall) material.








Promessa™ Series Hooks

Revised: 8/21/17

Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

STEP 5 Attach Trim

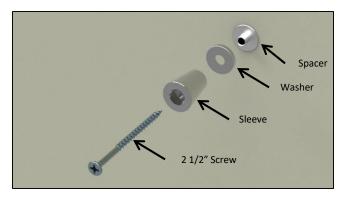

• Slip washer over spacer (spacer centers trim) while inserting 2 1/2" screw through all components. Proceed with attaching to wood blocking or vertical stud.

Thank you for using our products!

TileWare Products

PO Box 793, Hickory, NC 28603 Technical Support: 828-322-9273

Email: info@tilewareproducts.com

www.tilewareproducts.com

STEP 6 Mount Sleeve & Screw



 Using a #2 phillips head screw driver, attach screw firmly to wall.

STEP 7 Attach Cap STEP 8 Complete



• Thread on Cap.



• Installation complete.

Hooks Parts List

1100101 0100					
Model	Spacer quantity 1 per kit	Washer quantity 1 per kit	Sleeve quantity 1 per kit	Cap quantity 1 per kit	2 1/2" Screw quantity 1 per kit
G101-111 or G101-112 Cone Hook Kits	C200-044	C220-006	C220-003	C220-005 or C220-012 Contemporary - Traditional	C200-041
G101-211 or G101-212 Tee Hook Kits	C200-044	C220-006	C220-002	C220-005 or C220-012 Contemporary - Traditional	C200-041
G101-311 or G101-312 Thumb Hook Kits	C200-044	NO WASHER REQUIRED	C220-004	C220-005 or C220-012 Contemporary - Traditional	C200-041